

---

# Bad Block Copy Area User Manual

## General Description and Name

This BBM is mainly work for copying bad block to reserved area without bad block map table.

## Relevant User Options

The following special features on the special features tab apply to this scheme. The default values might work in some cases but please make sure to set the right value according to your system.

Please note only the below special feature items are related to this scheme and ignore any others. If any of below items doesn't exist, please check whether the right version has been installed or contact Data I/O for support by submitting Device Support Request through this address:

<http://www.dataio.com/support/dsr.asp>

Bad Block Handling Type = "Bad Block Copy Area"

Spare area : Please refer to "Description of common NAND special features.pdf". *Normally set as "Enabled" or "Disabled" for this BBM.* [Default 'Disabled']

RBA area: Number of blocks = 20 by default, you could set it according to your needs.

RBA area: Start block = 1004 by default, you could set it according to your needs.

## Special Notes

## Revision History

V1.0 July 21, 2009  
Create this spec.

## Appendix

You can get the file "Description of common NAND special features.pdf" from <http://ftp.dataio.com/FCNotes/BBM/>