
Datalight FlashFX Pro 3.3 User Manual

General Description and Name

This BBM is mainly work for Datalight FlashFX Pro system V3.3. It works a little different from former BBM for Datalight FlashFX Pro(V3.0) system.

Relevant User Options

The following special features on the special features tab apply to this scheme. The default values might work in some cases but please make sure to set the right value according to your system.

Please note only the below special feature items are related to this scheme and ignore any others. If any of below items doesn't exist, please check whether the right version has been installed or contact Data I/O for support by submitting Device Support Request through this address:

<http://www.dataio.com/support/dsr.asp>

Bad Block Handling Type = "Datalight FlashFX Pro 3.3"

Spare area : Please refer to "Description of common NAND special features.pdf". *Normally set as "Enabled" for this BBM.*[Default 'Disabled']

Serial Number : Specify the Serial Number. *Normally set as "0x00" or any random value, you can also contact RD for suggested value.*[Default '0']

BB: max allowed : Please refer to "Description of common NAND special features.pdf". *Normally key as default.*[Default 'FFFFFFFF' means as Datalight suggested]

Special Notes

Customer needs to prepare the data file with spare area data.

Revision History

V1.0 Sep 3th, 2010
Create this spec.

Appendix

You can get the file "Description of common NAND special features.pdf" from <http://ftp.dataio.com/FCNotes/BBM/>