

---

## **RBA LGE22 User Manual**

### **General Description and Name**

This scheme Implements the reserve bad block method. Update the Partition table/ ECC in the BBI partition of the device. (Block# 3952 and block# 3967)

### **Relevant User Options**

The following special features on the special features tab apply to this scheme. The default values might work in some cases but please make sure to set the right value according to your system.

Please note only the below special feature items are related to this scheme and ignore any others. If any of below items doesn't exist, please check whether the right version has been installed or contact Data I/O for support by submitting Device Support Request through this address:

<http://www.dataio.com/support/dsr.asp>

Bad Block Handling Type = "RBA LGE22"

Spare area = "Enable"

### **Special Notes**

- This BBM PC file should contain the OOB(spare areas).

### **Revision History**

V1.0 Date: 2012-10-11  
Create this spec.

### **Appendix**

You can get the file "Description of common NAND special features.pdf" from <http://ftp.dataio.com/FCNotes/BBM/>