
SKIP BBM RTM O3 User Manual

General Description and Name

This is a BBM used for VCC RTM O3 products.

Relevant User Options

The following special features on the special features tab apply to this scheme. The default values might work in some cases but please make sure to set the right value according to your system.

Please note only the below special feature items are related to this scheme and ignore any others. If any of below items doesn't exist, please check whether the right version has been installed or contact Data I/O for support by submitting Device Support Request through this address:

<http://www.dataio.com/support/dsr.asp>

Bad Block Handling Type = "SKIP BBM RTM O3"

Spare area = "Enabled" or "Disabled"
Depends on if the spare area is contained in the datafile

Error bits allowed in one page = "x":
[Normally required, default is 0]. How many error bits are allowed during preprogramming for each page, customer needs to set it to 1, 2.. bits if necessary.

Special Notes

Revision History

V1.0 08/07/2025
Initial release

Appendix

You can get the file "Description of common NAND special features.pdf" from
<http://ftp.dataio.com/FCNotes/BBM/>