
Skip with BB list User Manual

General Description and Name

This scheme Implements the skip block method. Map bad block table at locate block 0 page 0 and page1.

Relevant User Options

The following special features on the special features tab apply to this scheme. The default values might work in some cases but please make sure to set the right value according to your system.

Please note only the below special feature items are related to this scheme and ignore any others. If any of below items doesn't exist, please check whether the right version has been installed or contact Data I/O for support by submitting Device Support Request through this address:

<http://www.dataio.com/support/dsr.asp>

Bad Block Handling Type = "Skip with BB list"

Spare area = 'Enable' Or "Disable" depend on your file

Special Notes

None

Revision History

V1.0 Date: 2012-11-13
Create this spec.

Appendix

You can get the file "Description of common NAND special features.pdf" from <http://ftp.dataio.com/FCNotes/BBM/>